

1. Untighten **ankle strap** (by loosening completely the **notch strap** from the **buckle** of the strap) as well as the 2 **toe straps** so as to insert your boots and to adjust the **heel thrust** of **articulated binding** plate to your boot size. See Fig.3
2. Place the toe of your boot against the front part of the articulated binding plate, inside the 2 toe straps, making sure the two webbings of the forefront straps are **above your boot**.
3. Adjust the heel thrust to the proper size of your boot using the Morpholock system. See Fig.2:
- 3a-raise the **size adjust lever** with the help of **logo rubber tab puller** and move the **heel thrust** on the binding to the proper size of your boot: the heel of your boot must touch the back of the heel thrust for **perfect maintaining of the boot while snowshoeing**
- 3b-when size is correctly adjusted release the rubber tab: the heel thrust is then locked in the binding slots thanks to the teeth of the size adjust lever.
4. Your boot is then well adjusted lengthwise: start **tightening the 2 toe straps firmly** by pulling the printed webbings after insertion in the two holes quick buckles. Due to the flexible material of the binding front lateral parts your boot perfectly fits the binding.
5. Insert the loosened notch strap (step1) inside the ratchet buckle of the ankle strap around your boot then **tighten micrometrically the ankle strap** by moving back and forth the lever of ratchet buckle **until you feel firmly tightened**.
6. **Snowshoeing:** keep **articulated binding plate free** from snowshoe base when going flat, traverse, uphill or downhill: the **RTS** unlocked from base locker/step in all cases. The articulated binding must **lay flat** on the snowshoe base or **stepping** on the intermediary **composite climbing step** when climbing slopes: for this purpose rotate the **RTS** so as to lay on the **base Locker/Step** (fig.3) from its idle position (fig.2) with your gloves.
7. **After use, untighten ankle strap** first: push on the **release lever** of the ratchet buckle and pull out the ankle strap from the notch strap while keeping pressure on the **buckle push release lever**. Then untighten the 2 toe straps: pull up the ends of the quick buckles and loosen the webbings. See fig 3. Remove your boot. **To store** the snowshoe push the articulated binding on the base and lock it to the base by **rotating the RTS** so as to **insert it into the base locker/step**. See fig.2
8. **ALWAYS rinse** snowshoes with water and brush to remove mud and debris after every use.

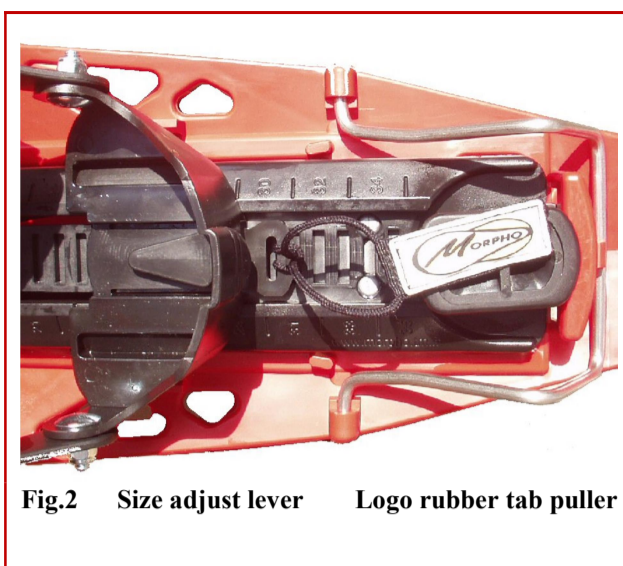


Fig.2 Size adjust lever Logo rubber tab puller

.MORPHO® snowshoes don't have a right or left snowshoe. MORPHO recommends to wear the snowshoes so that the ankle ratchet buckle and toe strap buckles are on the outside of the foot so as to tighten ankle and toe straps in the easiest way.

.Kneeling on one knee and wearing the other foot snowshoe is the best position to be when putting on the snowshoes. This gives you the best grip and leverage for inserting and tightening the straps.

.Ankle and toe straps must firmly tightened around your boot

.When rotating backward metallic climbing step to its idle position make sure to fully push it down until it is blocked by the snowshoe base **rear hook**. (fig.2)

.**Do not snowshoe on rock or concrete**, this causes excess wear: take off snowshoes until you are back on snow.

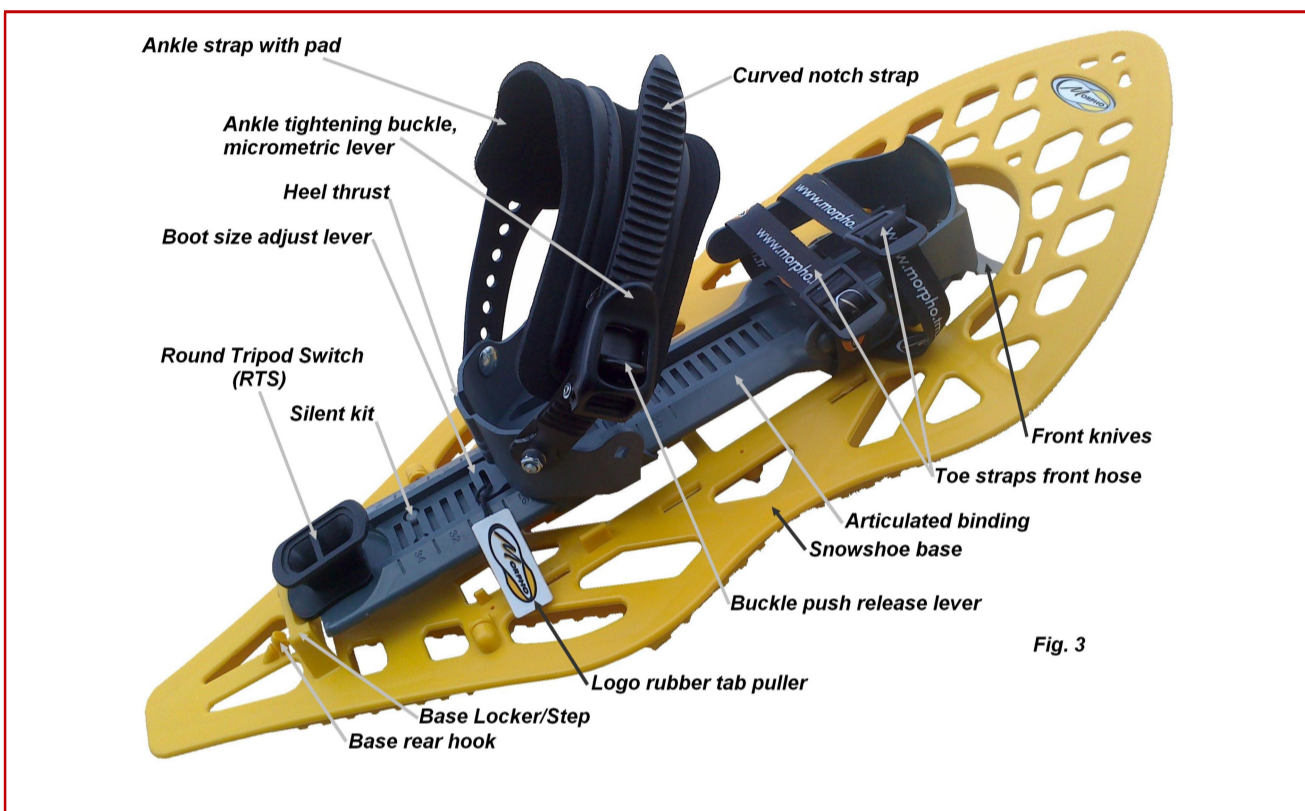


Fig. 3

CHARACTERISTICS

. Ratchet buckle snowboard type **ankle strap** with **one** 22.5cm curved notch strap, micrometric adjustment, **WITH** pad: outstanding comfort

.Intermediary composite climbing step

.Binding locker: easy switch RTS with gloves

.Stainless steel 2mm thick front knives

MORPHOLOGIC 2D waist concave side cut:

Contact surface: 2 x 1170 cm²,

Weight per pair: **1.89 Kg**

Length: 65, max. width: 25, min. width: 19cm

GENERAL:

.Material: polypropylene copolymere base, Polyamid 66 rigid articulated binding, polyacetal quick lock buckle type toe straps, 6 metallic spikes perfect grip

.Base structure with "X" vertical stripes providing best grip uphill, downhill and in traverse.

. Accepts all types of boots from 19 to 35cms, (graduation on the binding),

. Very easy boot size adjust Morpholock system.

. Silent kit, noise reduction by absorption

. Guaranteed **2 years** down to -38°C, shock resistant.

Local dealer STAMP

USER INSTRUCTION SHEET



MORPHO VIP Snowshoe
People between 60 and 96 kgs,
UNISEX
ALL TERRAINS, FREERIDE
www.morpho.tm.fr

REF. 13MHRAQVS Fig. 1



LIMITED WARRANTY

MORPHO snowshoes have a 2 years limited warranty. Should this product fail during the warranty period we shall repair it or replace it at our option, free of charge. This warranty applies to materials and workmanship, excluding wear and tear. Repairs due to improper use or care, negligence, product modification, or accident are not covered under this warranty agreement, but will be performed at a nominal charge on request. This warranty applies only to the original purchaser. Proof of purchase is required. Products purchased from an independent dealer should be returned to the dealer for forwarding to MORPHO. Shipping cost to MORPHO is the responsibility of the purchaser. Return postage will be paid by MORPHO. Except as provided herein, MORPHO makes no warranties, express or implied including but not limited to the implied warranties of merchantability and fitness for a particular purpose. MORPHO shall not be liable for any consequential or incidental corporal damage whatsoever. This warranty gives you special legal rights. You may also have other rights which vary state to state. For more product or safety information contact MORPHO: +33(0)450718657, jmm@morpho.tm.fr

ACCESSORIES

BAG for MORPHO shape



REF.: 10MHHS